

Roboty frezowania i wyrównania na całej szerokości jezdni i zatok

Kolumny 1, 2, 3, 4 oznaczają numery warstw liczone od góry.

Lokalizacja		Powierzchnia frezowania	O b j ę t o ś ć						Pole nawierzchni	Pole tworzyw (rusztów)
			frezowania	1	2	3	4	wyrównania		
km	m	m ²	m ³	m ³	m ³	m ³	m ³	m ³	m ²	m ²
0	0,00									
		90,000	1,890	7,200	18,000			3,070	180,00	
0	45,00	150,000	6,900	8,000	20,000			2,810	200,00	
0	95,00	90,000	5,040	7,200	18,000			1,620	180,00	
0	140,00	0,000	0,000	8,000	20,000			8,610	200,00	
0	190,00	0,000	0,000	8,000	20,000			10,330	200,00	
0	240,00	0,000	0,000	7,200	18,000			20,660	180,00	
0	285,00	0,000	0,000	8,000	20,000			23,580	200,00	
0	335,00	0,000	0,000	8,218	20,544			9,760	205,44	
0	386,36									
Sumy:		330,00	13,83	61,82	154,54			80,42	1545,44	